


POLOLU DRV8801 SINGLE BRUSHED DC

MOTOR DRIVER CARRIER

USER'S GUIDE

USING THE MOTOR DRIVER

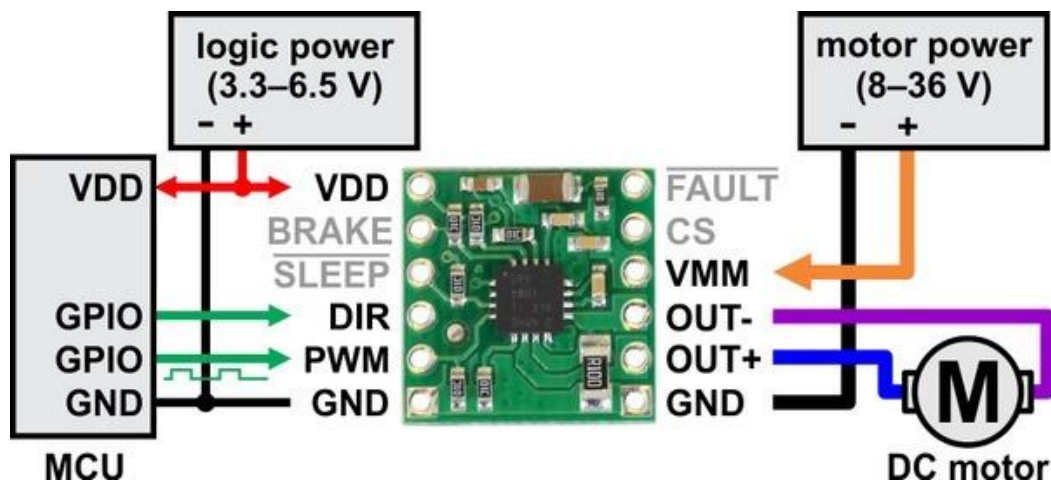

Minimal wiring diagram for connecting a microcontroller to a DRV8801 single brushed DC motor driver carrier.

In a typical application, power connections are made on one side of the board and control connections are made on the other. Aside from motor and power connections, the only required pins are DIR and PWM (called PHASE and ENABLE in the DRV8801 datasheet, respectively). A PWM signal can be applied to the PWM/ENABLE pin to achieve variable speed control in the direction determined by the state of the DIR/PHASE pin. The carrier board pulls PWM low by default, so the driver is only enabled when this pin is supplied with a high signal. The DIR pin does not have a defined default state, which means outputs could behave erratically if the DIR pin is left disconnected while the PWM pin is high.

The BRAKE pin determines whether the motor brakes or coasts when PWM pin is low (this pin is called MODE1 in the DRV8801 datasheet). The carrier board pulls it high, which corresponds to braking (both motor outputs are shorted together through ground). Setting the BRAKE pin low sets the outputs to coast whenever the PWM pin is low (both motor outputs are off). We generally recommend leaving this high while supplying a PWM signal to the PWM pin to get drive-brake (or “slow-decay”) operation, as this typically provides a more linear relationship between PWM duty cycle and motor speed than drive-coast (or “fast-decay”), and it can result in better performance at low duty cycles. The following truth table shows how the PWM, DIR, and BRAKE pins affect the driver outputs:

DRV8801 Truth Table					
PWM/ENABLE	DIR/PHASE	BRAKE/MODE1	OUT+	OUT-	operating mode
PWM	1	1	PWM (H/L)	L	forward/brake at speed <i>PWM</i> %
PWM	0	1	L	PWM (H/L)	reverse/brake at speed <i>PWM</i> %
L	X	1	L	L	brake low (outputs shorted to ground)
PWM	1	0	PWM (H/OPEN)	PWM (L/OPEN)	forward/coast at speed <i>PWM</i> %
PWM	0	0	PWM (L/OPEN)	PWM (H/OPEN)	reverse/coast at speed <i>PWM</i> %
L	X	0	OPEN	OPEN	coast (outputs off)

Note: When braking, the driver brakes low because the DRV8801’s MODE2 pin is pulled low on the carrier board. The MODE2 pin is not exposed to the user.


The SLEEP pin is pulled high on the board through a 10k resistor and can be left disconnected if you do not want to use the low-power sleep mode of the DRV8801.

The FAULT pin is an open-drain output that is driven low by the chip whenever an over-current, over-temperature, or under-voltage condition occurs. The carrier board includes a pull-up resistor on this pin, so no external pull-up is necessary. Note that the FAULT pin is a status-only signal that does not affect device functionality, so a low FAULT signal does not necessarily mean the driver outputs are disabled. For

example, the driver will start operating normally once the motor supply voltage is above 8 V, but the FAULT output will be low until the motor supply voltage reaches approximately 12 V. Please see the datasheet for more information about how the DRV8801 responds to and reports faults.

The CS pin outputs an analog voltage proportional to the motor current (approximately 500 mV per A).

PINOUT

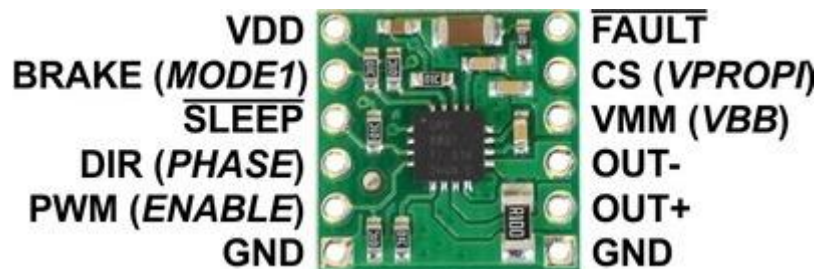



PIN	Default State	Description
VMM/VBB		8 V to 36 V motor power supply connection. This pin called VBB in the DRV8801 datasheet.
VDD		3.3 V to 6.5 V logic power supply connection. This pin is only used to power the FAULT, SLEEP, and BRAKE pull-up resistors on the carrier board. (The DRV8801 has its own internal logic voltage regulator.)
GND		Ground connection points for the motor and logic power supplies. <u>The control source and the motor driver must share a common ground.</u>
OUT+		H-bridge output +.
OUT-		H-bridge output -.
DIR/PHASE	<i>undefined</i>	Logic input for controlling motor direction.
PWM/ENABLE	LOW	Logic input for enabling the driver outputs/controlling motor speed. A PWM signal can be applied to this pin.
BRAKE/MODE1	HIGH	Logic input for controlling whether the driver brakes low or coasts when PWM pin is low. A logic high results in braking (slow-decay through ground).
$\overline{\text{SLEEP}}$	HIGH	Logic input that puts the DRV8801 into a low-power sleep mode when low.
$\overline{\text{FAULT}}$		Logic output that drives low when a fault occurs. The carrier board pulls this pin up to VDD.
CS/VPROPI		Analog voltage output proportional to motor current (500 mV per A). Note: this pin will output 0 V whenever the driver is in slow-decay mode (i.e., when BRAKE/MODE1 is HIGH).

REAL-WORLD POWER DISSIPATION CONSIDERATIONS



The DRV8801 datasheet recommends a maximum continuous current of 2.8 A. However, the chip by itself will overheat at lower currents. For example, in our tests at room temperature with no forced air flow, the chip was able to deliver 2.8 A for a few seconds, 1.4 A for approximately 30 s, and 1.2 A for almost two minutes before the chip's thermal protection kicked. A continuous current of 1 A per channel was sustainable for many minutes without triggering a thermal shutdown. The actual current you can deliver will depend on how well you can keep the motor driver cool. The carrier's printed circuit board is designed to draw heat out of the motor driver chip, but performance can be improved by adding a heat sink. Our tests were conducted at 100% duty cycle; PWMing the motor will introduce additional heating proportional to the frequency.

This product can get **hot** enough to burn you long before the chip overheats. Take care when handling this product and other components connected to it.


INCLUDED HARDWARE

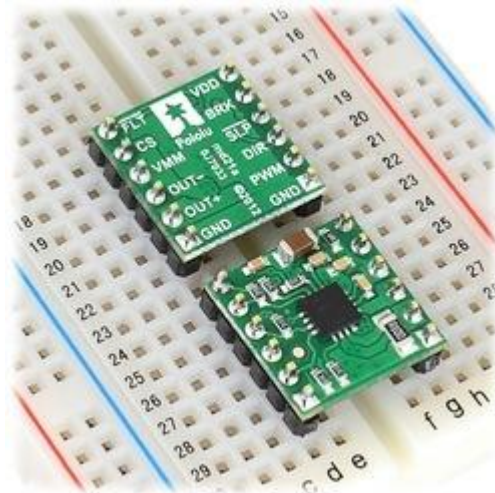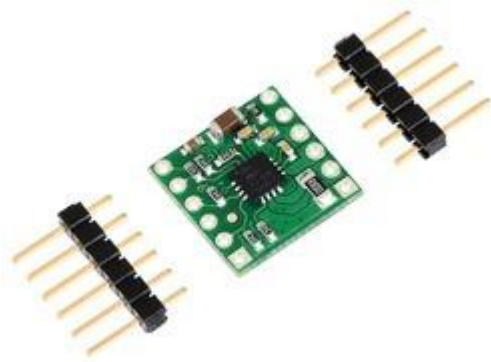

Breakaway 0.1" male headers are included with the DRV8801 motor driver carrier, which can be soldered in to use the driver with perfboards, breadboards, or 0.1" female connectors. (The headers might ship as a single larger strip that can be broken into smaller pieces.) The right picture above shows the two possible board orientations when used with these header pins (parts visible or silkscreen visible). You can also solder your motor leads and other connections directly to the board, or you could use 0.1" terminal blocks (not included) to allow for easy, temporary connections:

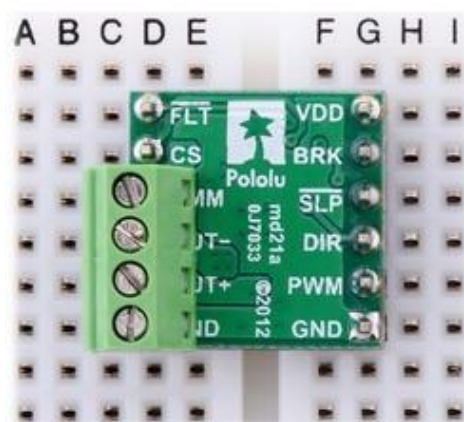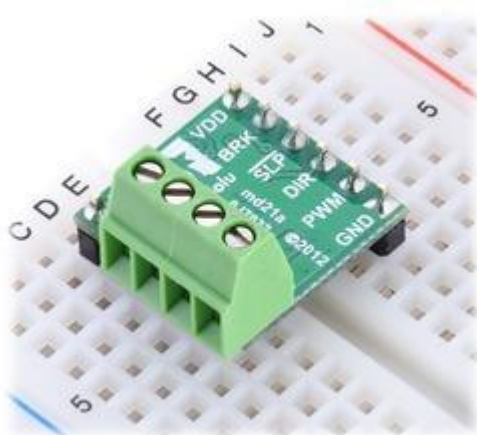

SCHEMATIC

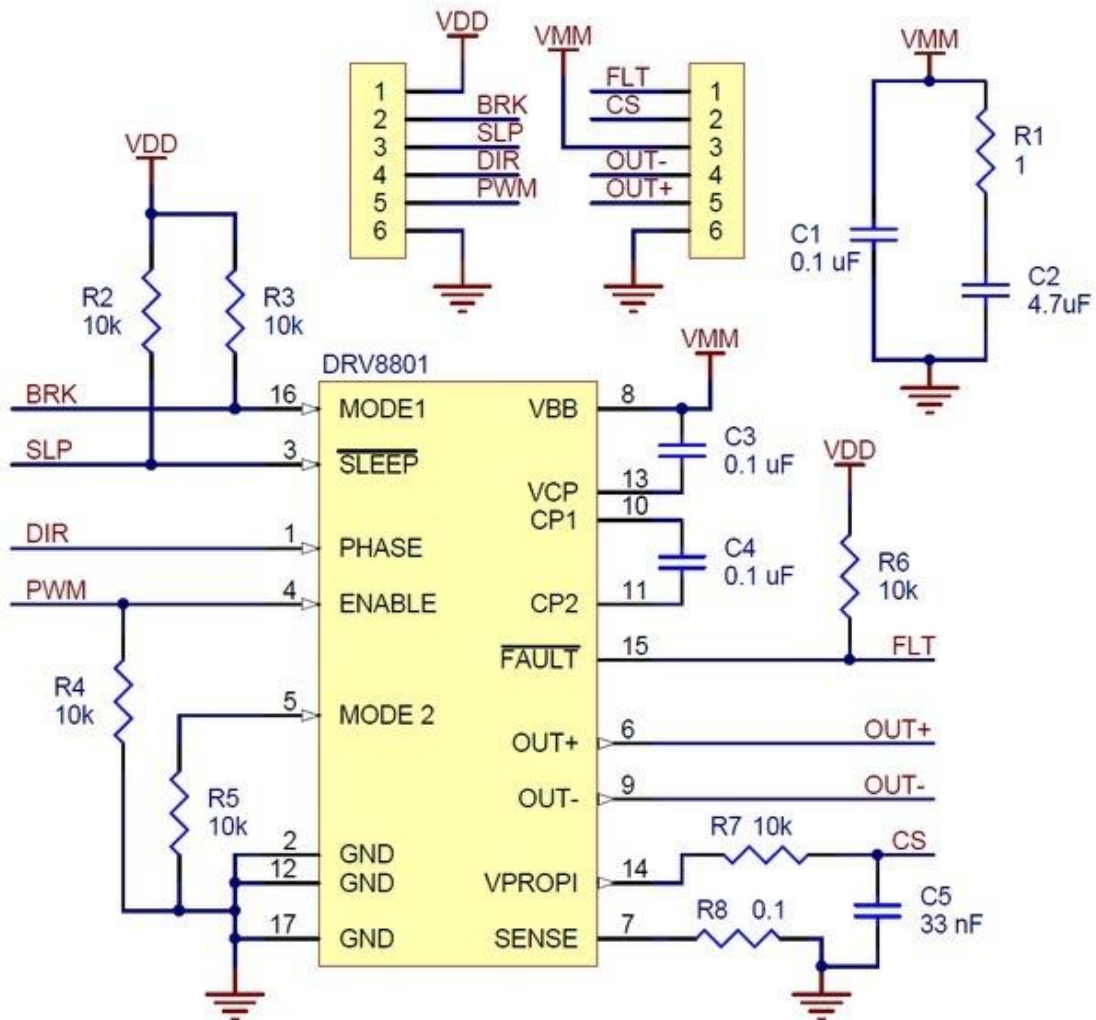

Schematic diagram for the DRV8801 single brushed DC motor driver carrier.

This schematic is also available as a downloadable pdf (157k pdf)